


XTOOL

F2 Air Purifier Go

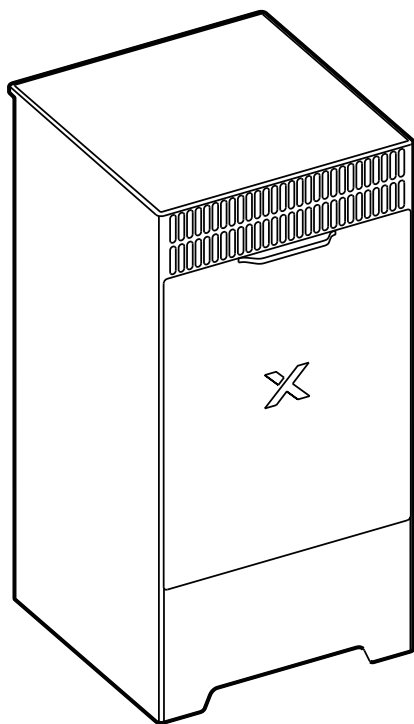


Quick Start Guide


Contents

What's in the box	01
First use	01
Filter replacement	09


What's in the box

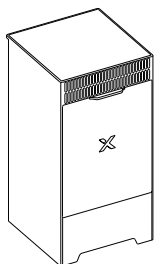

Purifier

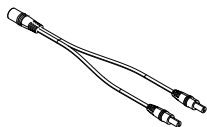

DC power splitter cable



G4 filter cotton




Screw



Washer



Sealing ring



Quick Start Guide





Safety Instructions


First use




If the xTool F2 model you purchased is MXF-K005-003, remove the shield highlighted in the images below before proceeding with the next steps.

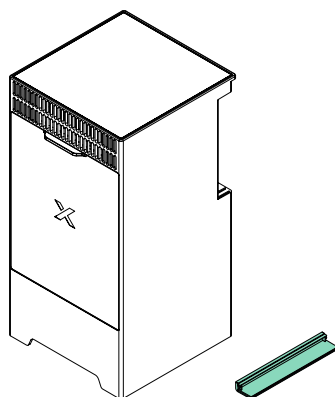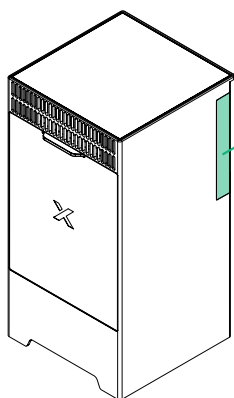





1 Open the cover, and then take out the fan module.

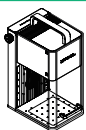


xTool F2
(sold separately)

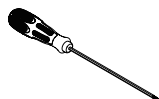

Screwdriver (included in
the xTool F2 package)

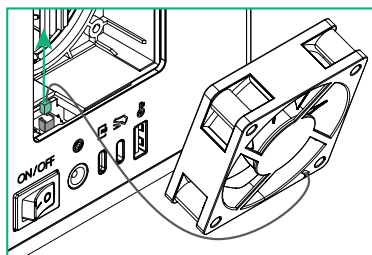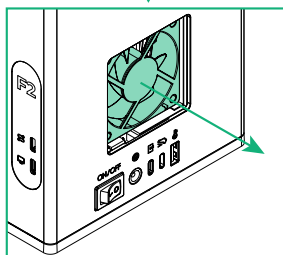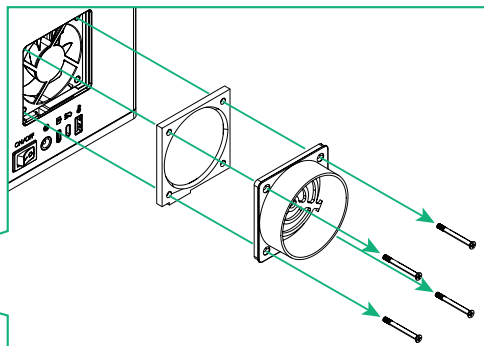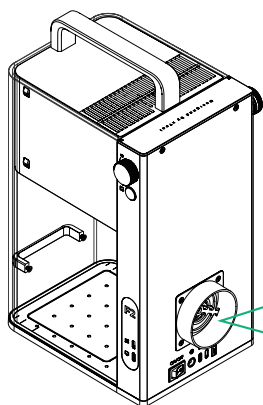



Remove the connector

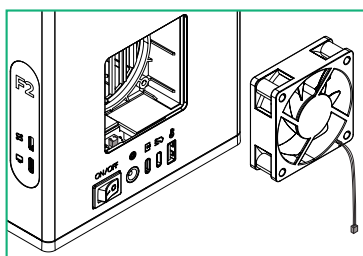



2 Install the sealing ring.







Sealing ring

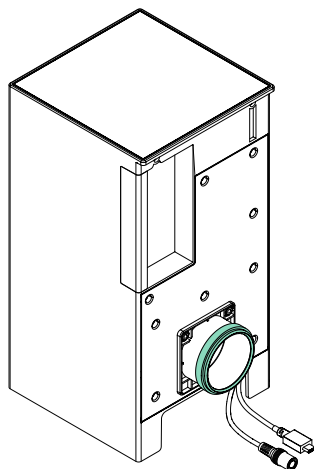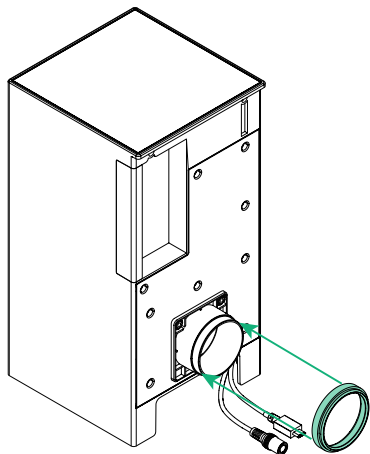


Make sure the sealing ring is installed in the correct orientation.

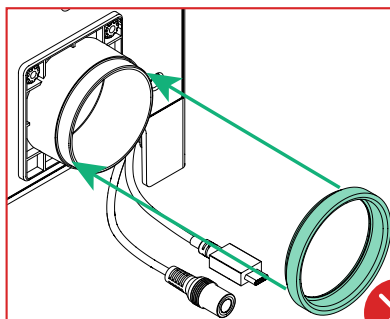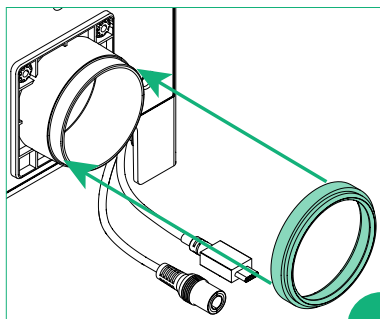




3 Connect the purifier to xTool F2.

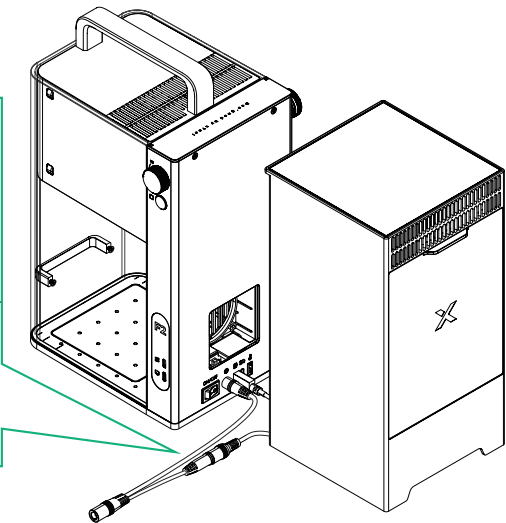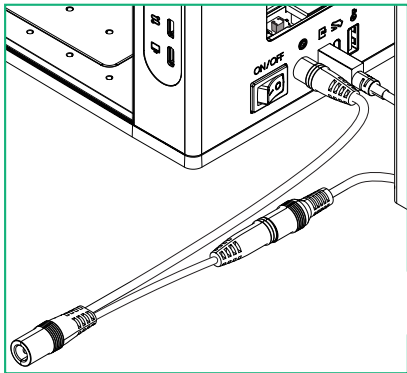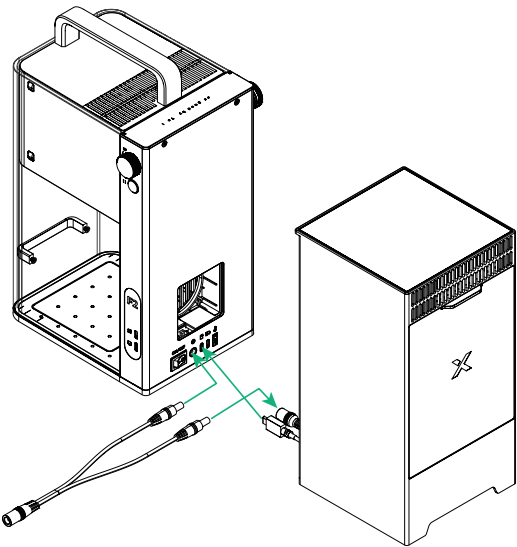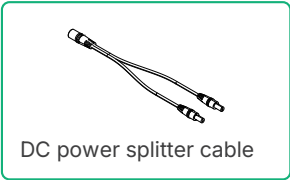



- 4** Turn on the power switch on xTool F2.

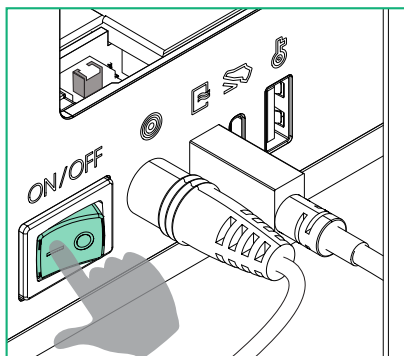

- 5** Open the rear cover of the purifier, and take out the pre-installed filter.

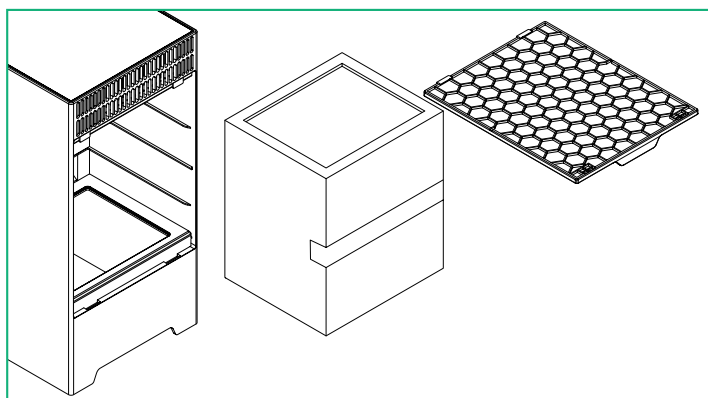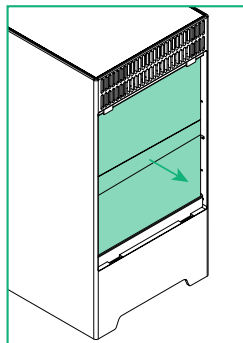
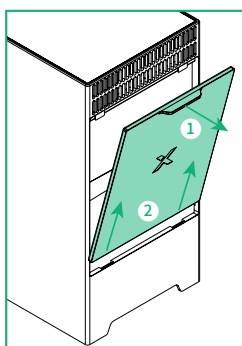


6 Install the purifier onto xTool F2.

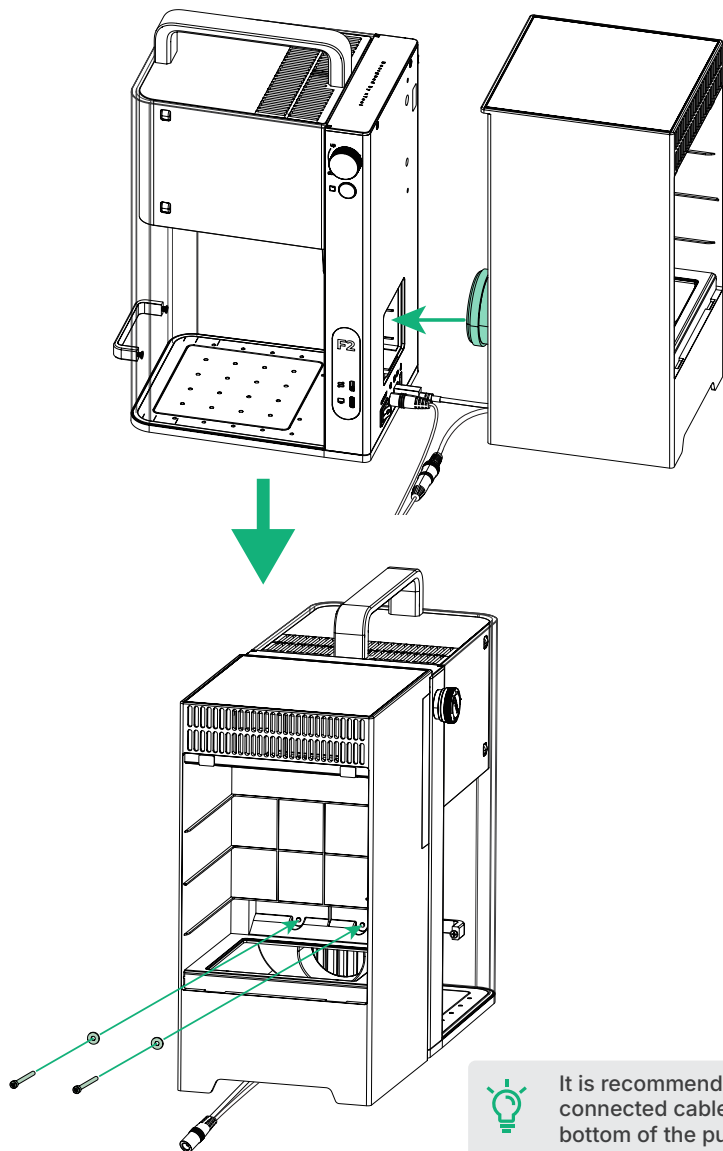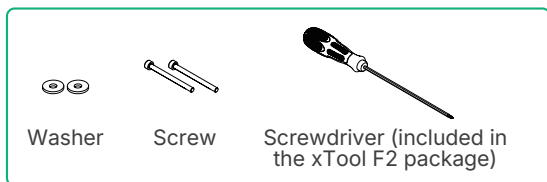


It is recommended to place the connected cables at the bottom of the purifier.


- 7** Place the filter back into the purifier, and close the rear cover.

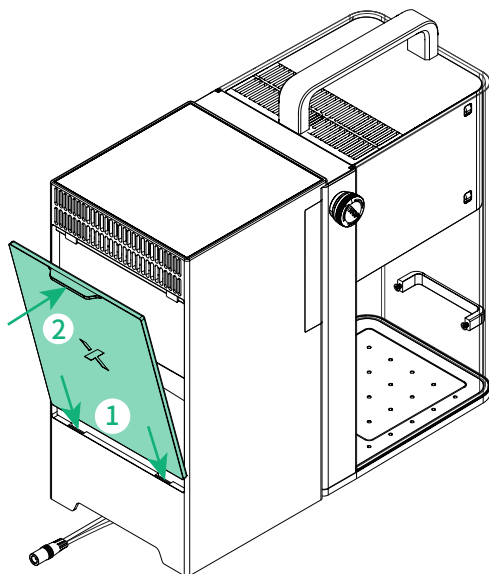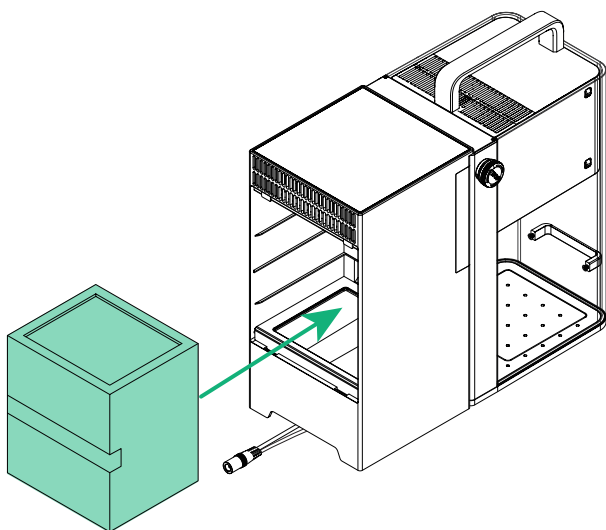


- 8** Connect the DC power splitter cable to xTool F2's power adapter, then connect the power adapter to the power cable.

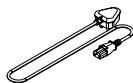

Power cable
(included in the xTool F2 package)

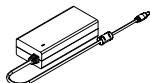

Power adapter
(included in the xTool F2 package)

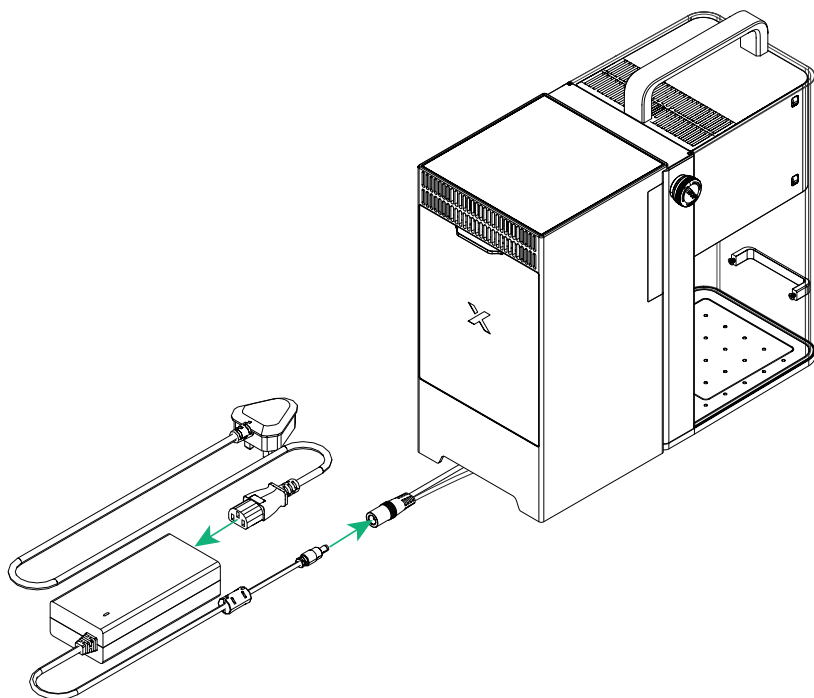

Filter replacement





Buy filters

xtool.com/products/filter-kit-for-f2-air-purifier-go




Before replacing the filter, ensure that the power is turned off.



1 Take out the existing filter.

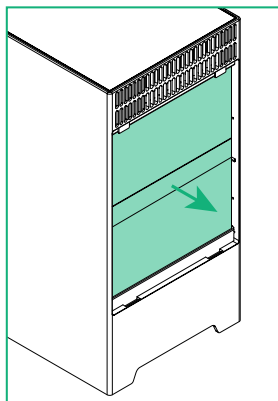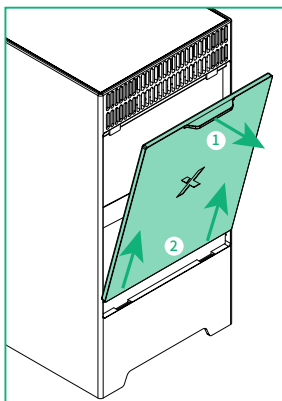

2 Install a new filter.

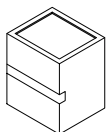

New filter
(sold separately; available on
xTool official website)

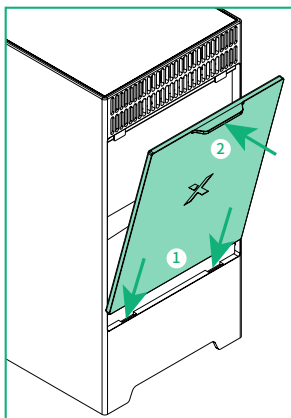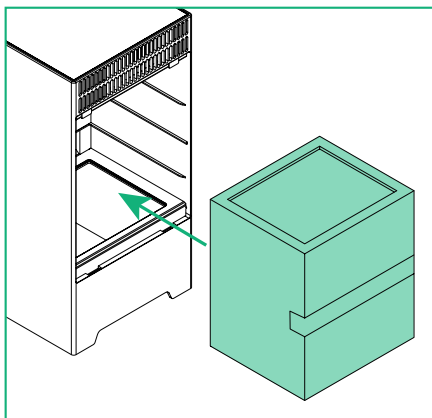

- 3** Connect the power, open the xTool software, click "Settings" near the purifier, and reset the filter's usage time. Scan the QR code or visit support.xtool.com/article/3303 for detailed information.





Filter cotton replacement




When processing materials that produce large amounts of smoke (such as basswood), it is recommended to replace the G4 filter cotton in a timely manner (three spare filter cotton sheets are included in the package). Below are the steps for replacing the filter cotton. Be sure to turn off the power before replacing the filter cotton.


(1) Take out the filter.

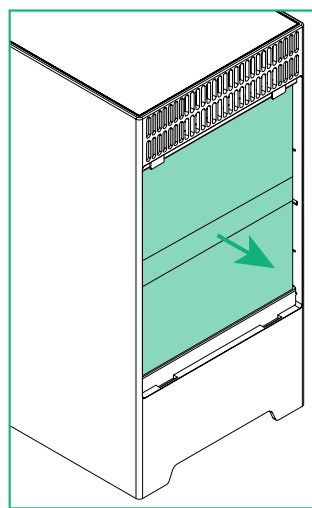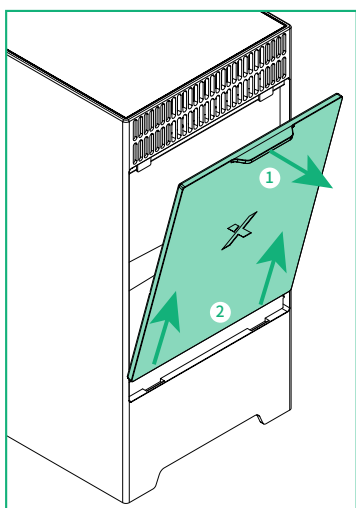


(2) Take out the filter cotton from the bottom of the filter, and install a new filter cotton.

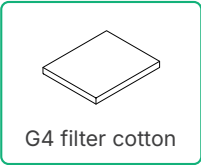


1) Flip the filter.

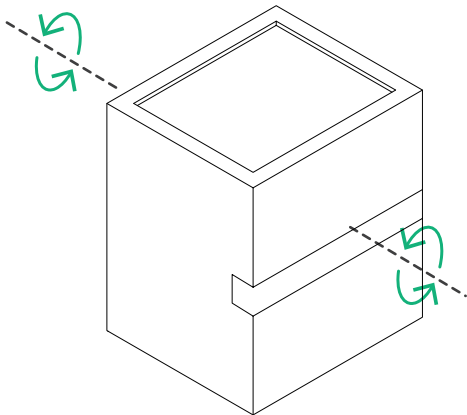


2) Take out the filter cotton.

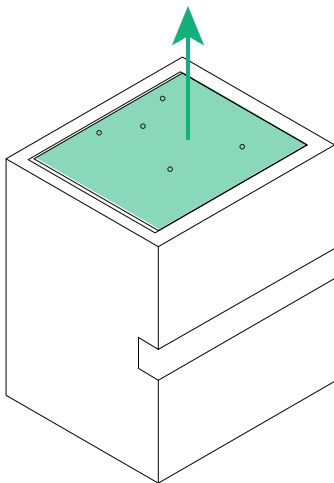



3) Install a new filter cotton.

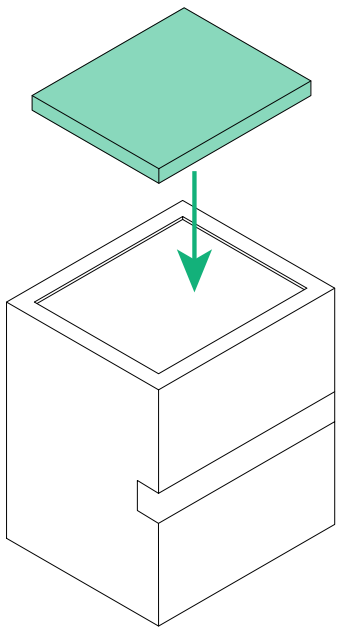

4) Flip the filter back.

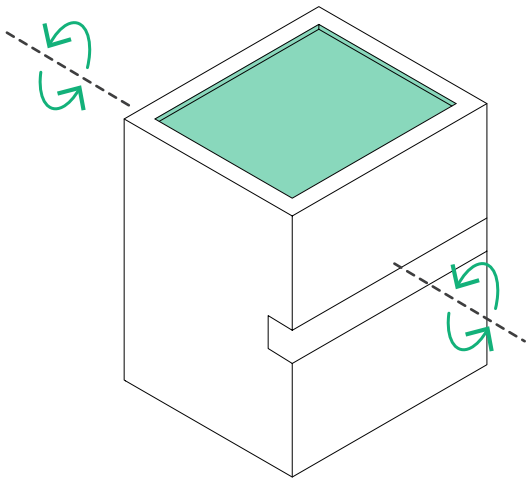

(3) Place the filter back into the purifier, and close the rear cover.

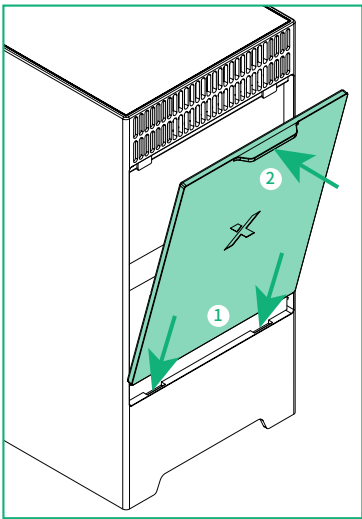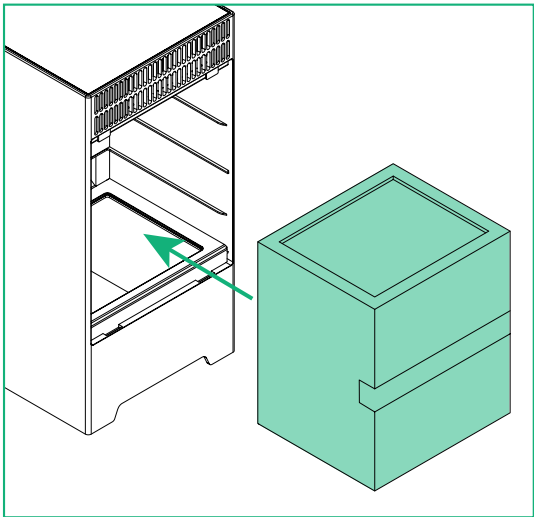

Product maintenance tip: Gently wipe with a clean cloth to keep the product surface dry and free of stains.

XTOOL